 


ECO

ERP regulation (for EU) states that electronic devices may only have 0.5W power consumption in standby mode. All Audio Pro products have Eco mode as default setting, as we want our planet to live longer.

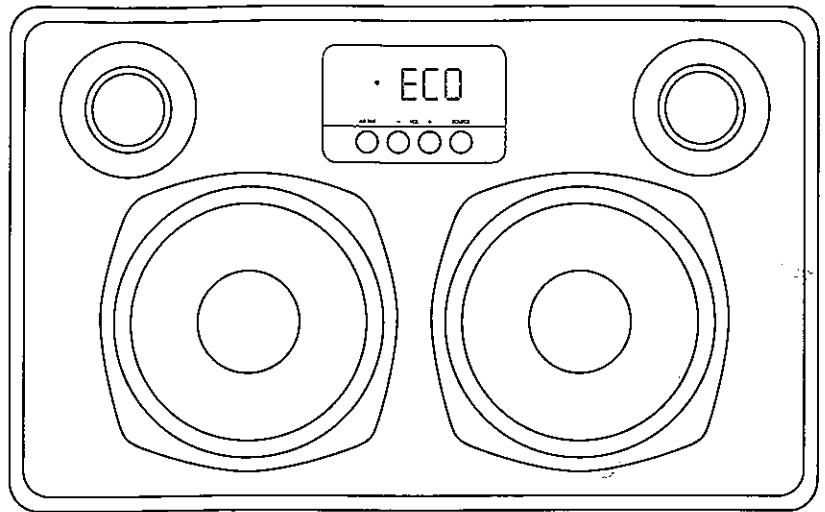 


IMPORTANT INFORMATION


Eco-mode is the Allroom Air One factory default setting. Using this setting saves power. When you stop playing music, the Air One will go into a low-power state after 30 minutes.

Once the Air One has gone into this low-power state, it will not wake up automatically when you begin playing music and will not show up as an available AirPlay® device.


Use the On/Standby button on the remote to bring Allroom Air One back to full-on state and ready to play again.

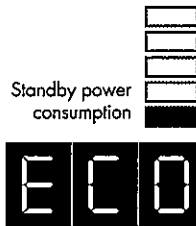

 In Eco mode, you must turn your Allroom Air One on with remote if it has gone into standby mode.

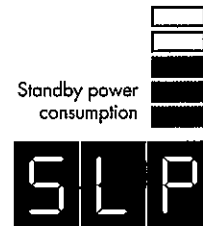

 In Sleep mode, Allroom Air One stays connected and wakes up when you play your music to it.

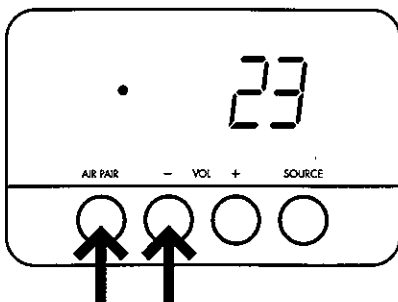

Remove the grille on speaker to access the controls. Push and hold AIR PAIR and VOL - button for 3 seconds to switch between Eco and Sleep mode.

SWITCH BETWEEN ECO AND SLEEP MODE

Eco-mode can be disabled if you want Allroom Air One to start automatically and stay visible on your list of available AirPlay® devices. This is called Sleep mode, and uses more power.

To switch between Eco and Sleep mode operation settings, press and hold the two buttons marked AIR PAIR and VOL - for three seconds. The display will show SLP or ECO corresponding to your selection.